


Step 1

Install rod into hole in cupola lid by sliding it into hole and tapping it firmly.



Step 2

Apply silicone to inside of finial filling the tube 3-4 good squeezes.

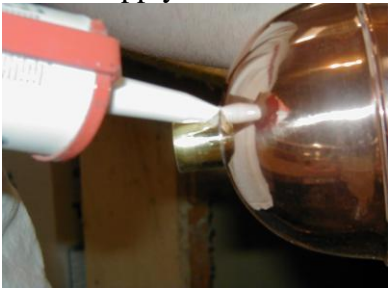

Step 3

apply silicone to outside of finial base to seal hole when fully installed.



Step 4

Slide finial over rod until seated against copper top