



## Assembly Instructions Full Size Weathervane

COPPER SPACER BALL (SMALL) 

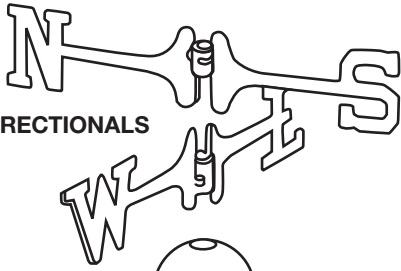

BRASS DIRECTIONALS

COPPER BALL (LARGE) 

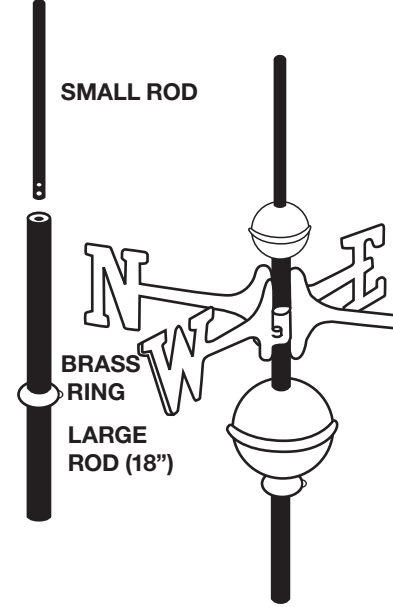

SMALL ROD


BRASS RING  
LARGE ROD (18")

ASSEMBLED VIEW

**YOUR PACKAGE INCLUDES THE FOLLOWING PIECES:**

- 1 Figure
- 1 Small Copper Ball
- 1 Set of Brass Directionals
- 1 Large Copper Ball
- 1 Brass Ring
- 1 Small Stainless Steel Threaded Rod
- 1 Large Brass Rod (18")

1



POSITION BRASS RING OVER LARGE ROD. TIGHTEN SET SCREW


2



THREAD SMALL ROD INTO LARGE ROD USING THREAD LOCKER PROVIDED. TIGHTEN FIRMLY WITH PLIERS.


3

SLIDE LARGE BALL DOWN ROD TO BRASS RING.

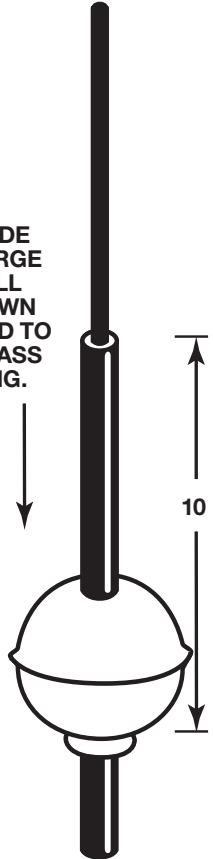


4

INTERLOCK DIRECTIONALS, SLIDE ONTO ROD. TIGHTEN SET SCREWS.

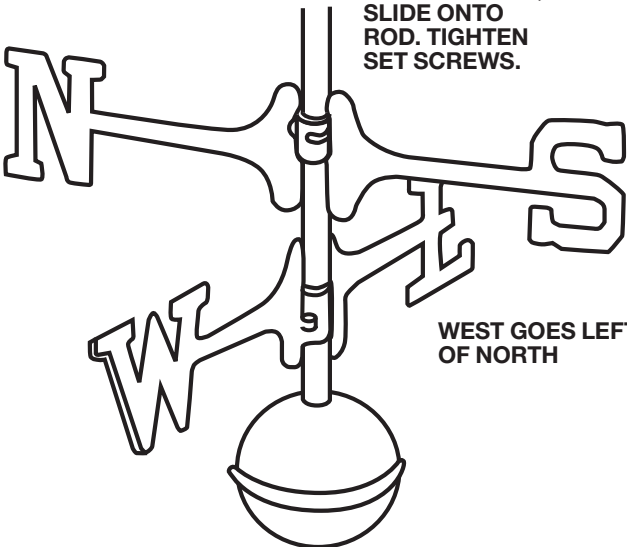

WEST GOES LEFT OF NORTH

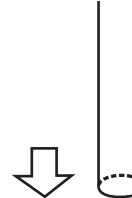

BRASS BOTTOM OF WEATHERVANE TUBE SLIDES OVER SMALL ROD.

5

APPLY COMMON GREASE TO ROD SO VANE WILL ROTATE FREELY

FINAL STEP... SLIDE WEATHERVANE FIGURE ONTO SMALL ROD ENJOY!

