
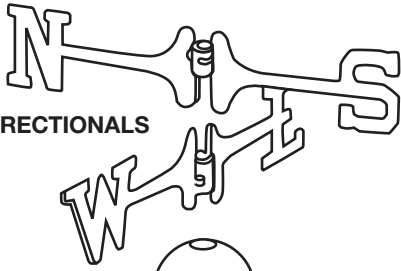


Assembly Instructions Full Size Weathervane

COPPER SPACER BALL (SMALL) 




BRASS DIRECTIONALS


COPPER BALL (LARGE) 

YOUR PACKAGE INCLUDES THE FOLLOWING PIECES:

- 1 Figure
- 1 Small Copper Ball
- 1 Set of Brass Directionals
- 1 Large Copper Ball
- 1 Brass Ring
- 1 Small Stainless Steel Threaded Rod
- 1 Large Brass Rod (18")

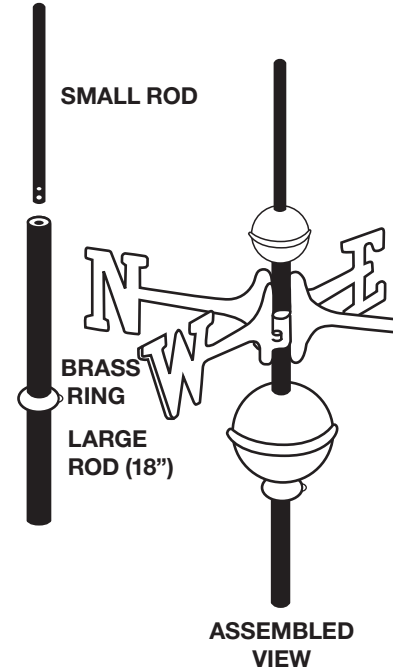

1



POSITION BRASS RING OVER LARGE ROD. TIGHTEN SET SCREW


2



THREAD SMALL ROD INTO LARGE ROD USING THREAD LOCKER PROVIDED. TIGHTEN FIRMLY WITH PLIERS.



3

SLIDE LARGE BALL DOWN ROD TO BRASS RING.

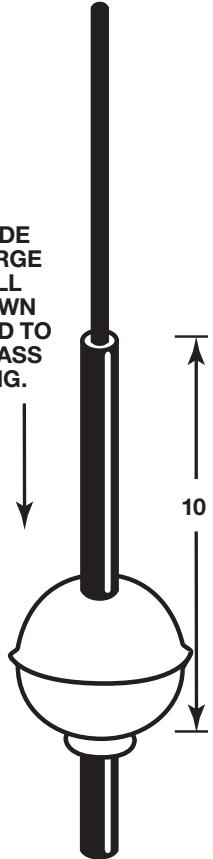

4

INTERLOCK DIRECTIONALS, SLIDE ONTO ROD. TIGHTEN SET SCREWS.

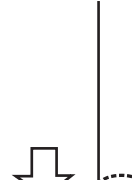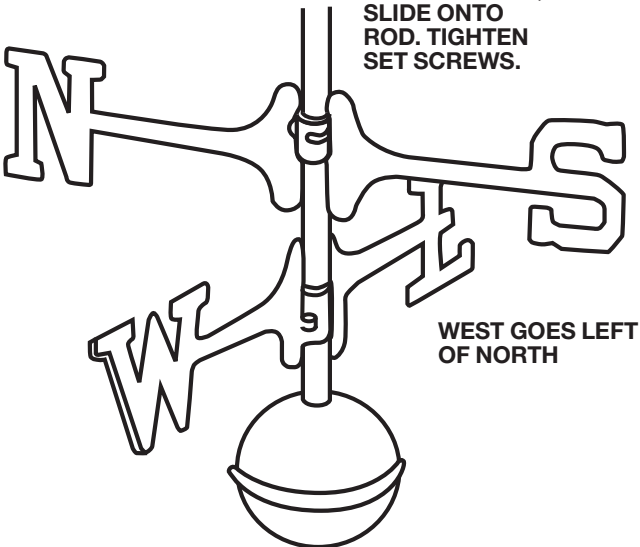

BRASS BOTTOM OF WEATHERVANE TUBE SLIDES OVER SMALL ROD.

5

APPLY COMMON GREASE TO ROD SO VANE WILL ROTATE FREELY

FINAL STEP... SLIDE WEATHERVANE FIGURE ONTO SMALL ROD ENJOY!

